







4-UART-USB 1.0-002

Remove USB card & install jumper to enable RS-232

Copyright (c) 2016 John R Coffman. All rights reserved.
 Licensed for hobbyist use only.
 Retrobrew Computing Group





