


ECB Bus

Bus Connections

ECBbus.sch

Bus Connections.sch

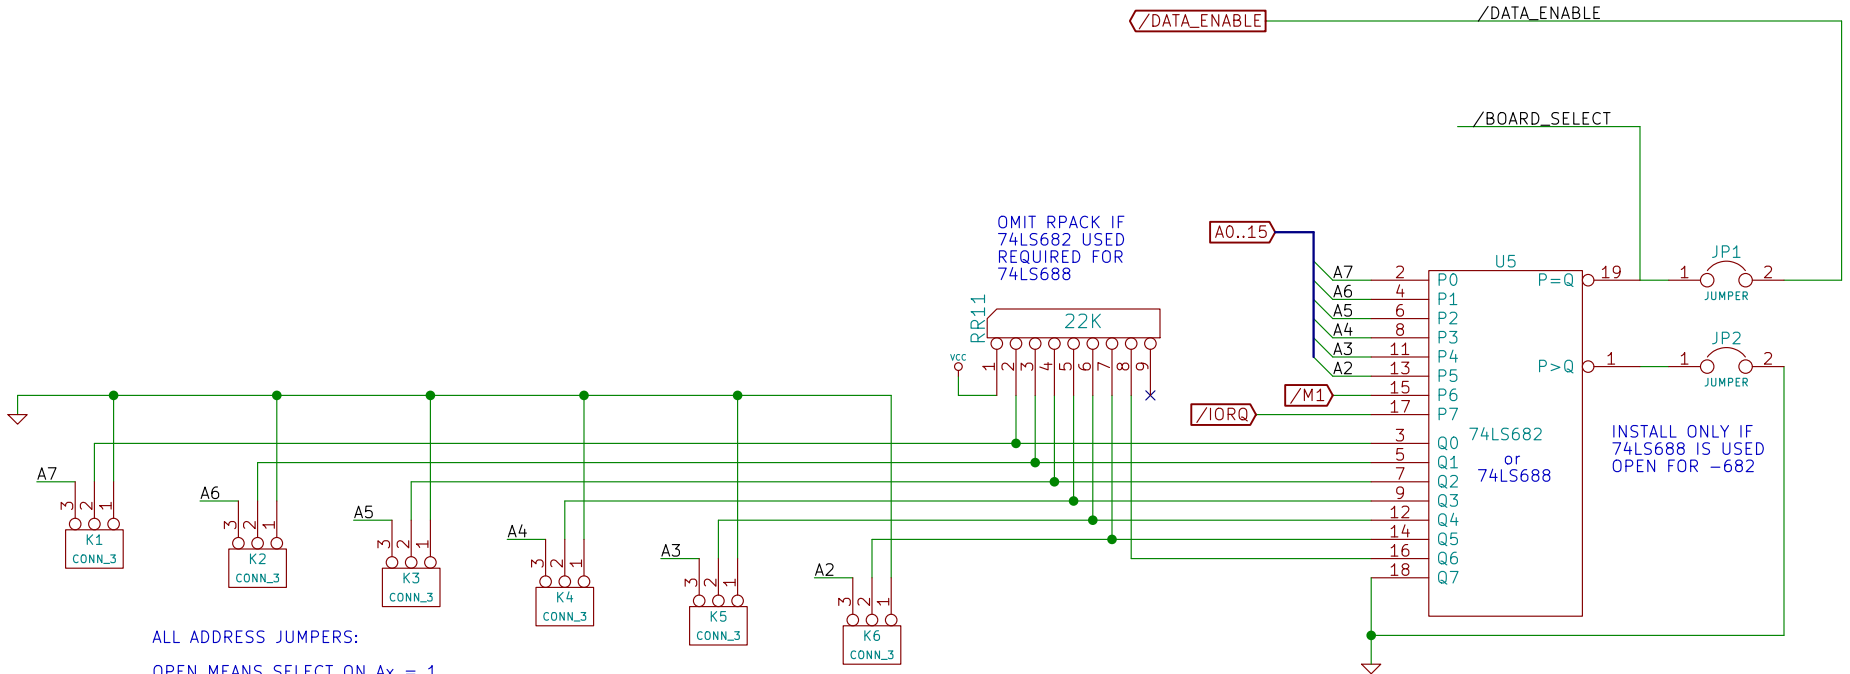

OMIT RPACK IF
74LS682 USED
REQUIRED FOR
74LS688

INSTALL ONLY IF
74LS688 IS USED
OPEN FOR -682

ALL ADDRESS JUMPERS:
OPEN MEANS SELECT ON Ax = 1
1-2 MEANS SELECT ON Ax = 0
2-3 MEANS Ax IS "DON'T CARE"

Say, for a TL16C550 UART, which uses A0,A1,A2 to select registers, the jumper setting to select from 0xC0 .. 0xC7 would be [A7..A2]:

```
A7 off 1
A6 off 1
A5 1-2 0
A4 1-2 0
A3 1-2 0
A2 2-3 unused
```

Copyright (c) 2016 John R. Coffman
All rights reserved.

Licensed for hobbyist use only.

Sheet: /
File: ECB Protoboard III.sch


Title: ECB Protoboard III

Size: A Date: 22 jun 2016

KiCad E.D.A. kicad 4.0.4+e1-630848ubuntu14.04.1-stable

Rev: 001

Id: 1/3

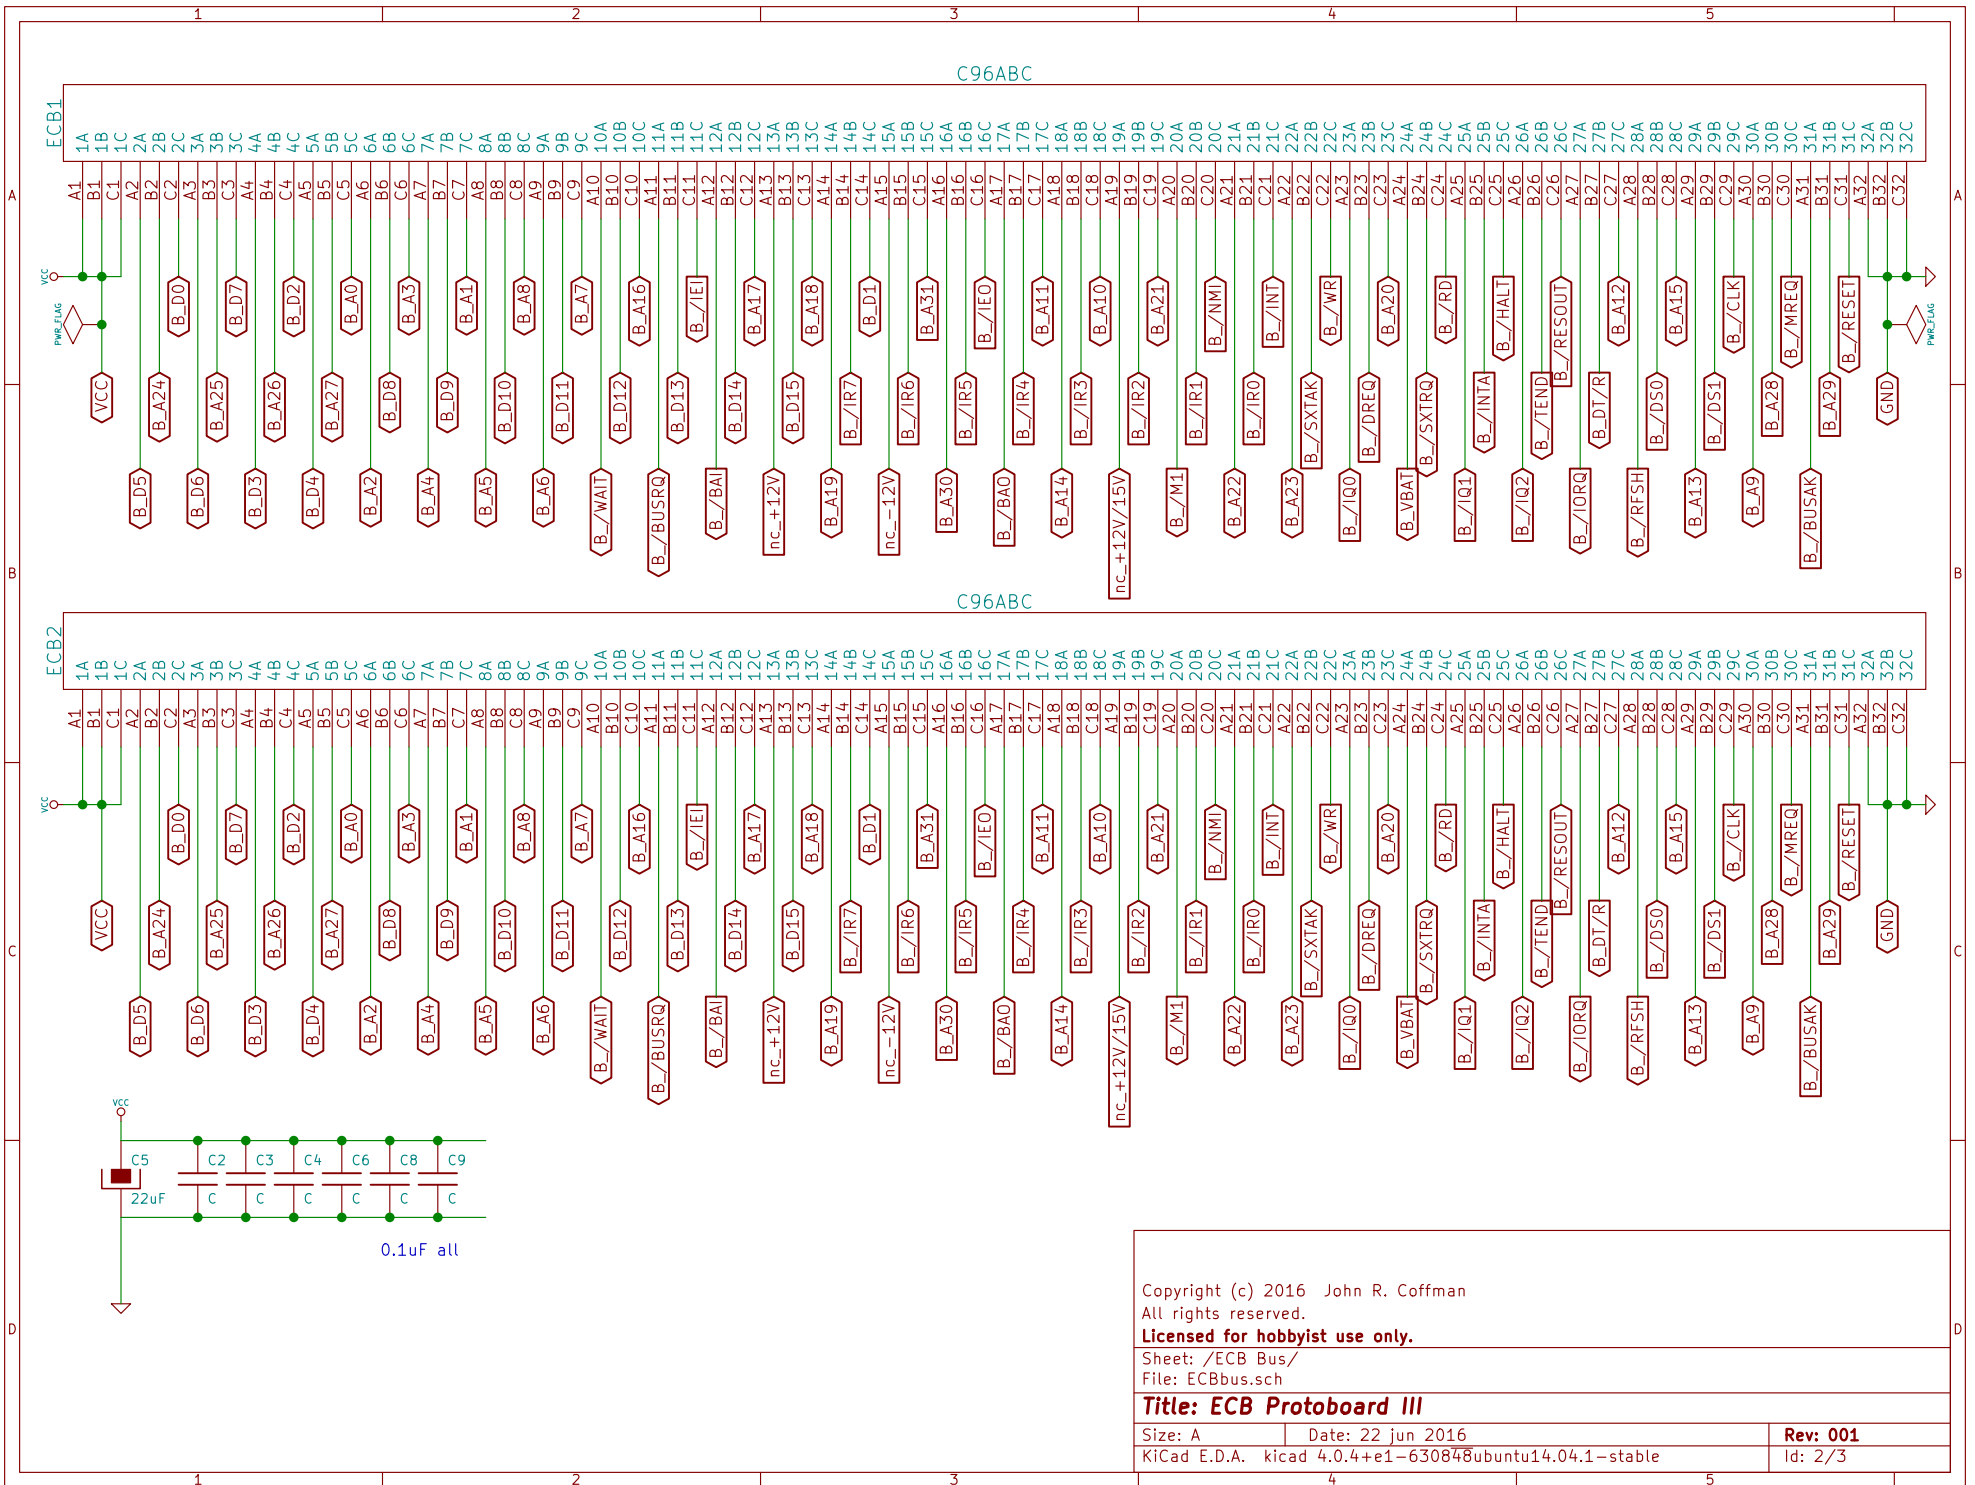

Copyright (c) 2016 John R. Coffman
 All rights reserved.


Licensed for hobbyist use only.

Sheet: /ECB Bus/
 File: ECBbus.sch

Title: ECB Protoboard III

Size: A Date: 22 jun 2016
 KiCad E.D.A. kicad 4.0.4+e1-630848ubuntu14.04.1-stable

Rev: 001
 Id: 2/3

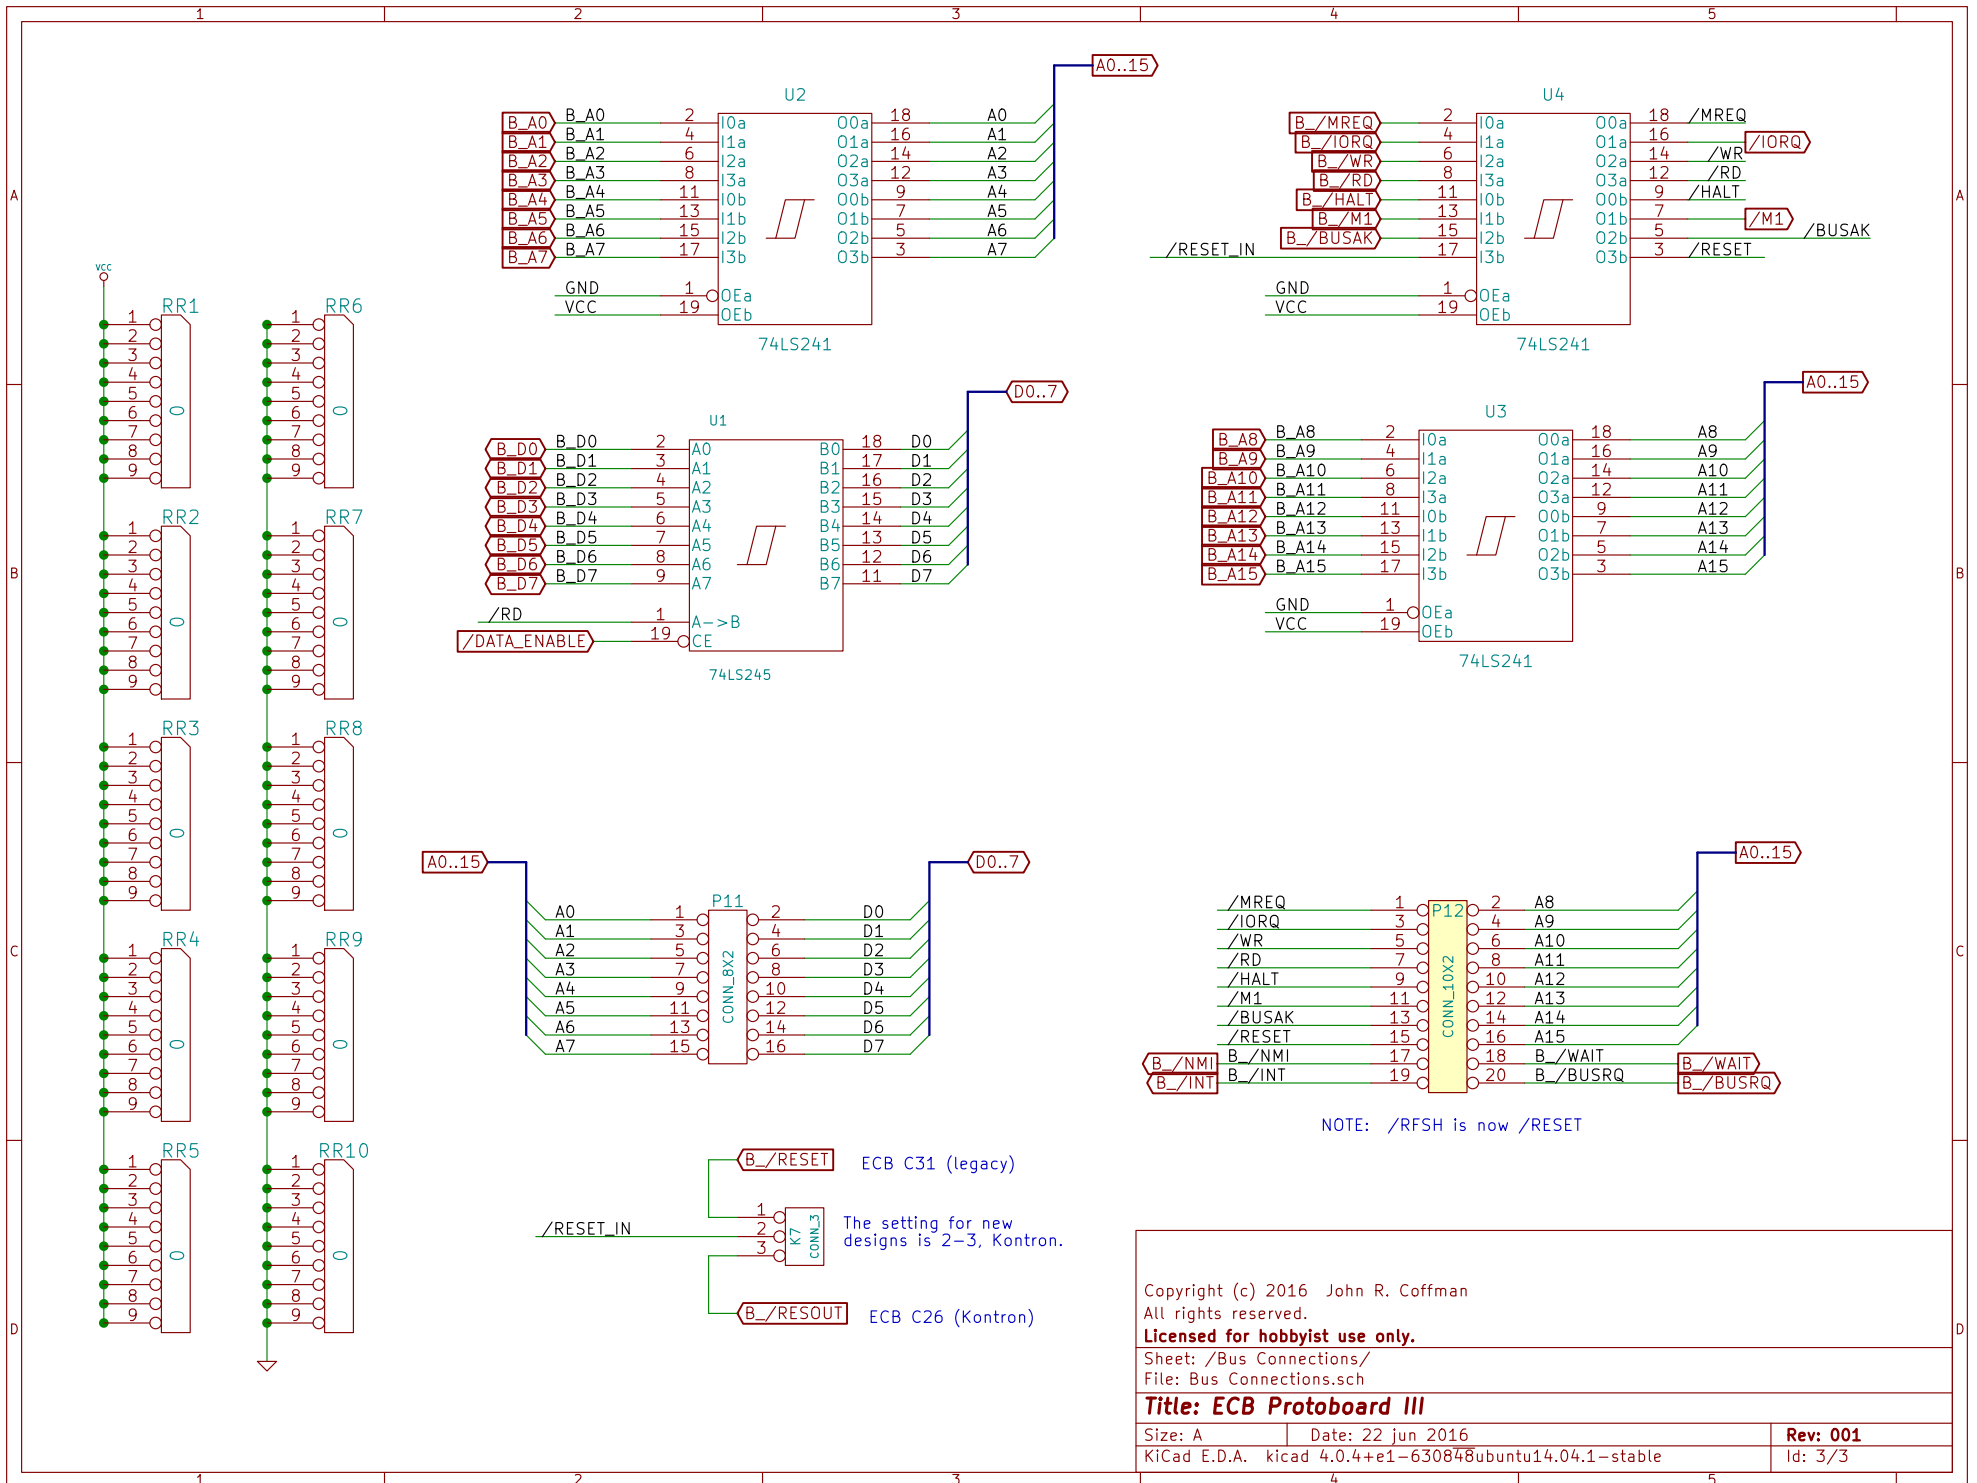

Copyright (c) 2016 John R. Coffman
All rights reserved.

Licensed for hobbyist use only.

Sheet: /Bus Connections/
File: Bus Connections.sch

Title: ECB Protoboard III

Size: A Date: 22 jun 2016
KiCad E.D.A. kicad 4.0.4+e1-630848ubuntu14.04.1-stable

Rev: 001
Id: 3/3